


辅件 Accessories

技术参数 Technical data



FORWARD

Mounting bracket OHC

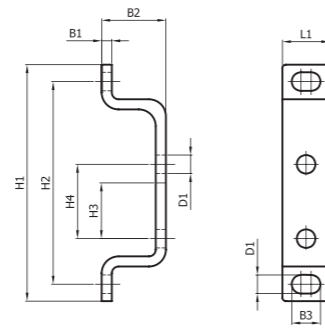



尺寸和订货数据 Dimensions and ordering data										
规格 Size	B1	B1	B1	B1	B1	B1	B1	B1	B1	型号 Type
MINI	2	19	7.3	4.3	43	35	5.5	11	12	OHC-MINI
MIDI/MAXI	3	19	8.3	5.3	70	60	16.5	22	14	OHC-MIDI/MAXI

Mounting bracket OHO

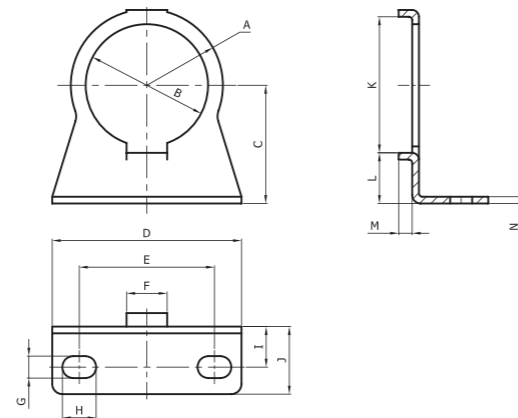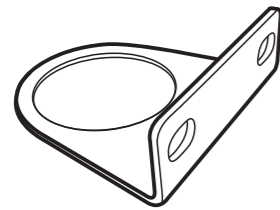

尺寸和订货数据 Dimensions and ordering data															
规格 Size	A	B	C	D	E	F	G	H	I	J	K	L	M	N	型号 Type
MINI/MAXI	22.5	36.5	35	56	40	12	6.5	10	12	20	40.4	15	4	2	OHO-MINI/MAXI
MIDI	30	52.5	48	70	53	12	8.5	10.5	17.5	27	55.5	20	4	2	OHO-MIDI

Nut HMR

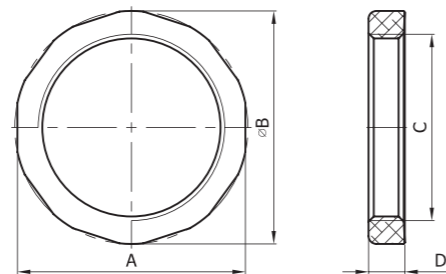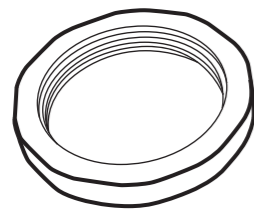

尺寸和订货数据 Dimensions and ordering data					
规格 Size	A	B	C	D	型号 Type
MINI/MAXI	44	45	M36*1.5	7	HMR-MINI/MAXI
MIDI	60	62	M52*1.5	8	HMR-MIDI

辅件 Accessories

技术参数 Technical data

FORWARD



Manometer OMA



压力表用于测量、显示气动控制系统的压力。
The manometer is used to measure and display the pressure of the controlled system.

尺寸和订货数据 Dimensions and ordering data			
型号 Type	Normal size 外形尺寸	Pneumatic connection 接口尺寸	Indicating range 显示范围
OMA-40-10-1/8	40	G1/8	0-10 bar
OMA-40-16-1/8			0-16 bar
OMA-50-10-1/4	50	G1/4	0-10 bar
OMA-50-16-1/4			0-16 bar

Branching modules FRM

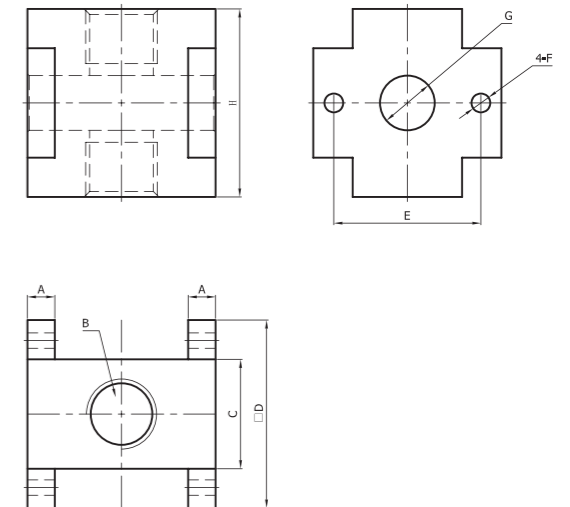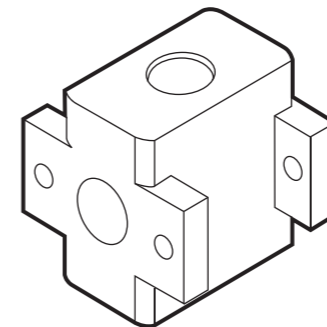

尺寸和订货数据 Dimensions and ordering data									
规格 Size	A	B	C	D	E	F	G	H	型号 Type
MINI	6	G1/8,G1/4,G3/8	22	40	30	4.3	11.5	40	FRM-...-MINI
MIDI	8	G3/8,G1/2,G3/4	32	55	43	5.5	16	55	FRM-...-MIDI